


DROPPED CEILING

SC 1:5

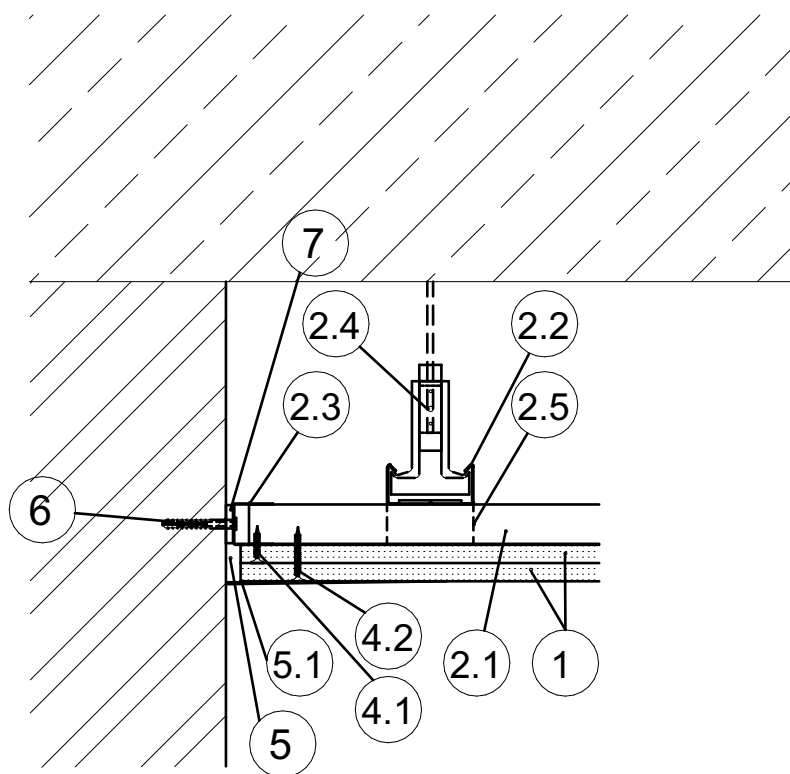

INSTALLATION

NO.	FUNCTION
1	PLASTERBOARD
2.1	MOUNTING R-CD PROFILE
2.2	LOAD-BEARING R-CD PROFILE
2.3	PERIMETER PROFILE UD
2.4	HANGER
2.5	ANGLED ANCHOR
4.1	SCREW 212/25 TN
4.2	SCREW 212/45 TN
5	ANCHORED TO PERIMETER STRUCTURE
5.1	REINFORCING TAPE

1) INSTALATION OF R-CD PROFILES

2) APPLICATION OF THE MINERAL WOOL, WHICH WILL BE INSERT ABOVE THE R-CD PROFILE

3) IT IS NECESSARY TO PUT THE INSTALATION OARDS ONE NEXT TO EACH OTHER, THERE CAN NOT E ANY GAP ETWEEN THEM

4) APPLICATION OF PLASTEROARDS AS DROPPED CEILING, IT WILL BE ANCHORED ON THE R-CD PROFILE